

Aprire il proprio browser (es. Internet Explorer) e digitare l'indirizzo HTTP://192.168.0.1 per accedere alla pagina di configurazione del modem router.

Internet Expl	http://192.168.0.1/	Windows Internet Explore	er
le Edit View	Favorites Tools Help		
Google			Search 🔹 🧾 🐐 More >>
🏠 🎪 🌈 Inte	ernet Explorer cannot display the webpage		
	ernet Explorer cannot displa	ay the webpage	
	You are not connected to the Int	ternet.	
	- The website is encountering prob	blosse	

Verrà visualizzata la seguente pagina di autenticazione

Il server 192. utente e una	168.0.1 all'indirizzo NETGEAR DGN2200 richiede un nome password.
Avviso: il ser in modo nor di una conne	ver ha richiesto che il nome utente e la password siano inviat n sicuro, ovvero mediante autenticazione di base senza l'uso essione sicura.
11/2	Password
	Memorizza credenziali
1.000	

Inserire la username e la password impostati di default:

- Username: admin
- Password: password

Il server 192.1	68.0.1 all'indirizzo NETGEAR DGN2200 richiede un nome
utente e una	password.
Avviso: il serv	er ha richiesto che il nome utente e la password siano inviati
in modo non	sicuro, ovvero mediante autenticazione di base senza l'uso
di una conne	ssione sicura.
	admin
	Memorizza credenziali

Prima di iniziare la configurazione si presenta la seguente pagina

SMAR	WIZARD FOU	r manager ss-N 300 Modem Router model DGN2200
 Setup Wizard Add WPS Client 	Setup Wizard	
	Select Country	
Setup Rosis Conings	Country	UK •
ADSI Settings	Auto-Detect Connection	TYDE
Wireless	The Smart Setup Wizard	an detect the type of Internet connection that you have.
Settings	Do you want the Smart S	tup Wizard to try and detect the connection type now?
	Yes.	
Basic Settings	No. I want to configu	the router myself.
Advanced	1	
Content Filtering		Next
Loas		
Block Sites		
Port Forwarding / Port Triggering		
Schedule		
• E-mail		
Router Status		
Attached Devices		
 Backup Settings 		
Set Password	-	

In corrispondenza di Select Country scegliere Italy

Alla voce Auto-Detect Connection Type scegliere l'opzione No, I want to configure the router myself, quindi cliccare sul tasto Next.

SMARTY	AR VIZARD TM router N300 Wi	r manager Wireless ADSL2+ Modem Router model DGN2200	
Setup Wizard Add WPS Client	Setup Wizard		
Setup	Country	ltaly 💙	
 Basic Settings 	-		
ADSL Settings	The Smart Setup Wizard can	ype an detect the type of Internet connection that you have.	
 Wireless Settings 	Do you want the Smart Setur	up Wizard to try and detect the connection type now?	
USB Storage	O Yes.		
 Basic Settings 	No. I want to configure the	the router myself.	
Advanced		(;;)	
Content Filtering		Next	
• Logs			
 Block Sites 			

È quindi possibile procedere alla configurazione impostando i parametri necessari all'attestazione alla rete FASTWEB tramite la procedura di Setup Wizard.

La prima schermata che viene mostrata è quella di Basic Settings.

NETGE/	VIZARD" reviser manager NDD Wirelas ADS2+ Adean Runur media DCH2200	Sidect Language: Exglob - Agaty
Setup Wizard Add WPS Client	Basic Settings	Help The DGN2200 Settings pages allow you to certifiquee upgrade and check the status of your
- and the second	Does your Internet connection require a login?	NETGEAR ADGL Router
Setup + Basic Settings	🖲 Yes 🔊 No	Click an item in the leftmost column. The current softings or information for that area appear in the center column.
ADSL Sottings Wireless Settings USB Scenee	Encapsulation PPPoA (PPP over A	Helpful information related to the service Settings page appears in this column. If you are using in informal Explorer, you may click an item in the center column to young directly to the related help section; otherwise, scott down until you reach it.
 Basic Settings 	Lotin quest	
Advanced Settings	Password	Basic Settings Help
Content Filtering	Connection Mode Always Or Mile Timecot (in Minutes)	Note: If you are setting up the Router for the first time, the default settings may work for you with no changes.
Eirourall Dulos	Internet IP Address	Does Your Internet Connection Require & Login?
Sociece	Get Dynamically from ISP	And all in the second of the best of second on the second s
Schedule	🕲 Use Static IP Address	Select the option sees on the type of account you have with your term in you here a the enter regin information energy time you connect to the internet or you have a PPPOE account with your ISP, select Yes. Otherwise, select No.
E-mail Uaintenance Router Status	Domain Name Server (DNS) Address © Gel Automatically from 13P	Note: If you have installed PPP software such as WirPaET (from Earthink) or Enternet (from PaEBII), then you have PPPOE. Select Yes. After selecting Yes and configuring your Router, you with earthing the PPP enterna wind PDE sectores and PDE sectores and the Manual

Modificare le impostazioni come di seguito indicato.

In corrispondenza della domanda

Does Your Internet Connection Require A Login? scegliere l'opzione No.

NETGEAR SMARTWIZARD Wireless-N 300 Modem Router model DGH2200				
Setup Wizard Add WPS Client Setup Basic Settings ADSL Sottings	Dees your Internet connection require a login?			
Wireless Settings USB Storage Basic Settings	E Account Name (If Required) Domain Name (If Required)	DGN2200		
Advanced Settings Content Filtering Logs Block Siter	Internet IP Address @ Cet Oynamically from ISP Use Static IP Address IP Address	0,0,0,0		
Port Forwarding / Port Triggering	IP Subnet Mask Gateway IP Address			
 Block Services Schedule E-mail 	Use IP Over ATM (IPOA) IP Address IP Subnet Mask			
Maintenance Router Status Attached	Gateway IP Address			

Vengono in tal modo automaticamente selezionate le seguenti impostazioni:

- Internet IP Address: Get Dynamically from ISP
- Domain Name (DNS) Address: Get Dynamically from ISP
- NAT (Network Address Translation): Enable
- Router MAC Address: Use Default Address

nternet IP Address				
 Get Dynamically from ISP 				
O Use Static IP Address				
IP Address	0	. 0	. 0	. 0
IP Subnet Mask	0	. 0	. 0	. 0
Gateway IP Address	0	. 0	. 0	. 0
OUse IP Over ATM (IPoA)				
IP Address	0	. 0	. 0	. 0
IP Subnet Mask	0	. 0	. 0	. 0
Gateway IP Address	0	. 0	. 0	. 0
Domain Name Server (DNS) Address @ Get Automatically from ISP Duble Zhe DND Recent				
Domain Name Server (DNS) Address Set Automatically from ISP Use These DNS Servers Primary DNS				
Domain Name Server (DNS) Address ③ Get Automatically from ISP ① Use These DNS Servers Primary DNS Secondary DNS				
Domain Name Server (DNS) Address ③ Get Automatically from ISP ① Use These DNS Servers Primary DNS Secondary DNS VAT (Network Address Translation)			•	• •
Domain Name Server (DNS) Address Get Automatically from ISP Use These DNS Servers Primary DNS Secondary DNS VAT (Network Address Translation) Enable]. 		
Domain Name Server (DNS) Address ③ Get Automatically from ISP ① Use These DNS Servers Primary DNS Secondary DNS NAT (Network Address Translation) ④ Enable ① Disable].		
Domain Name Server (DNS) Address Get Automatically from ISP Use These DNS Servers Primary DNS Secondary DNS NAT (Network Address Translation) Enable Disable Disable Disable Firewall]. 		
Domain Name Server (DNS) Address Get Automatically from ISP Use These DNS Servers Primary DNS Secondary DNS NAT (Network Address Translation) Enable Disable Router MAC Address				
Domain Name Server (DNS) Address Get Automatically from ISP Use These DNS Servers Primary DNS Secondary DNS NAT (Network Address Translation) Enable Disable Disable Bisable Router MAC Address Use Default Address				

Per confermare tali impostazioni, cliccare a fondo pagina su Apply.

JMA	< 1 v	Vizano vieless-N 300 Modem Router model DGN2200				
 Setup Wizard Add WPS Cliont 	Î	Basic Settings				
		Coes your internet connection require a login:				
Basic Sottings		() No.				
ADSI. Settings						
Wireless Settings		Gateway IP Address	Ľ	J.[0]•[⁰	J.[U
		Domain Name Server (DNS) Address				
Basic Settings		Get Automatically from ISP				
Advanced		C Use These DNS Servers				
Content Filtering		Primary DNS				- ·
Loas		Secondary DNS				7.
Block Sites	12					
Port		NAT (Network Address Translation)				
Forwarding /		Enable				
Port Inggering		© Disable				
Schedule		Disable Firewall				
E-mail		Bouter MAC Address				
		Use Default Address				
Router Status		Use Computer MAC Address				
Attached		Use This MAC Address		C4:	3D:C7:	55:3A:B8

Passare quindi alla configurazione dei parametri ADSL, cliccando su ADSL Settings.

NETGE	VIZARD reuter manager WIZARD Virieless-N 300 Modem Router model DCN2200	
 Setup Wizard Add WPS Client 	A Basic Settings	
	Ves	
Basic Settings	No	
ADSL Settings Wineicas Settings	Account Name (If Required) DGN2200	
	Domain Name (If Required)	
Basic Settings	bommin mane (integanea)	_
Advanced Settings	Internet IP Address Get Dynamically from ISP	
Content Filtering Logs	O Use Static IP Address	

La schermata si presenta con le seguenti impostazioni di default:

SMART	NR VIZARD v Vireles-N 300 Modem Router model DGN2200	2027 NR
Setup Wizard Add WPS Client	ADSL Settings	
Sales -	Multiplexing Method	LLC-BASED
asic Settings	VPI	8
DSL Settings	VCI	35
Vireless :	DSL Mode	Auto •
Settings	and the second sec	

Modificare il valore dei parametri nel seguente modo:

- Multiplexing Method: LLC-BASED
- VPI: 8
- VCI: 36
- DSL Mode: Auto

NETGE/	R VIZARD Wireless-N 300 Modem Router model DGN2200	Nacor Ta our	
Setup Wizard Add WP S Client Setup Basic Settings ADSL Settings Wireless Settings Basic Settings Basic Settings Advanced Settings	ADSL Settings Multiplexing Method VPI VCI DSL Mode Appl	y Cancel	LLC-BASED • 8 3e] Auto •

Per confermare i dati cliccare su Apply.

Per verificare se l'apparato è connesso correttamente alla rete FASTWEB e pronto per l'utilizzo, cliccare sulla pagina Router Status, nella sezione Maintenance.

In corrispondenza della sezione Internet Port devono risultare compilati i campi relativi agli indirizzamenti assegnati dal server di rete (nei campi IP Address, Gateway IP Address e Domain Name Server). Tale operazione potrebbe richiedere qualche minuto: effettuare un refresh della pagina per verificare il cambiamento di stato del modem router. Gli indirizzi riportati nello screenshot sono esempi puramente indicativi.

NETGEAR SMARTWIZARD Wireless-N 300 Modem Router medel DGN2200				
Setup Wizard Add WPS Client	- Router Status			
	Hardware Version	DGN2200		
	Firmware Version	V1.0.0.20_4.0.20		
Basic Settings	GUI Language Version	V1.0.0.20		
ADSL Settings	Internet Port			
Wireless	= MAC Address	C4:3D:C7:55:3A:BB		
Settings	IP Address	93.48.112.182		
	Network Type	DHCPClient		
Basic Settings	IP Subnet Mask	255.255.255.0		
Advanced	Gateway IP Address	93.48.112.184		
Settings	Domain Name Server	83.103.25.250		
		62.101.93.101		
Logs	LAN Port			
 Block Sites 	MAC Address	C4:3D:C7:55:3A:BA		
Port	IP Address	192.168.0.1		
Forwarding /	DHCP	On		
Port Triggering	IP Subnet Mask	255.255.255.0		
Block Services	Estate and a second sec			
Schedule	Modem			
• E-mail	ADSL Firmware Version	A2pB025c1.d21j2		
Maintenance	Modern Status	connected		
Poutor Status	UnStream Connection Speed	20477 Rups		
Amarkad	VDI	0 10 10 10 10 10		
 Attached Devices 	VCI	96		
- Paaluur				
= Dackup	Minutese Deat			



Setup Wizard Add WPS	Î	Router Status		
Client		Hardware Version	DGN2200	
		Firmware Version	V1.0.0.36_7.0.36	
		GUI Language Version	V1.0.0.25	

